

2019-2078
2019-10-10

PRIMARY DEVICE LABEL

Chlorking Saline Chlorination System, Model NEXGEN

CHLORINE GENERATOR
CONTROLS BACTERIA AND ALGAE
in
Swimming Pool (and Spa) Waters

COMMERCIAL

A maximum of 1,420,000 L of water can be treated with
Chlorking Saline Chlorination System, Model NEXGEN

Maximum output of hypochlorous acid equivalent to 11.34 kg of free available chlorine
per day

For swimming pools, a range of 1.0 – 3.0 ppm of free available chlorine must be
maintained.

For spas, a range of 3.0 – 5.0 ppm of free available chlorine must be maintained.

KEEP OUT OF REACH OF CHILDREN

READ THE LABEL AND OPERATING MANUAL BEFORE USING

REGISTRATION NO. _33004_____ PEST CONTROL PRODUCT ACT

Warning: Operating the *Chlorking Saline Chlorination system, Model NEXGEN*, without
water flow through the cell can cause a buildup of flammable gases which can result in
FIRE OR EXPLOSION

WARNING: Do not use this device with bromide products.

NOTE TO USER: This pest control product is to be used only in accordance with the
directions on the label. It is an offence under the *Pest Control Products Act*, to use this
product in a way that is inconsistent with the directions on the label.

CHLORKING INC.
2935 NORTHEAST PARKWAY
ATLANTA, GEORGIA, U.S.A, 30360. 1-800-536-8180

REPLACEMENT CELL LABEL

Titanium Electrode

Replacement Electrodes for the *Chlorking Saline Chlorination System, Model NEXGEN*

REGISTRATION NO. _33004_____ *PEST CONTROL PRODUCTS ACT*

This electrode must only be used on this model of chlorine generating device.

READ THE LABEL AND REFER TO OWNERS MANUAL OF THE *Chlorking saline Chlorination System, Model NEXGEN* BEFORE USING.

CHLORKING INC.

2935 NORTHEAST PARKWAY

ATLANTA, GEORGIA, U.S.A, 30360. 1-800-536-8180

OWNER MANUAL



USER'S GUIDE

MODEL NEXGEN

TABLE OF CONTENTS

INTRODUCTION.....	4
WARRANTY INFORMATION	5
SAFETY INFORMATION.....	6-7
PREPARING YOUR WATER BEFORE INSTALLATION... ..	8-9
SALT CHART FOR CORRECT MAINTENANCE	10
TOOLS AND PARTS REQUIRED FOR INSTALLATION.....	11
PLUMBING YOUR SYSTEM.....	12
ELECTRICAL SPECIFICATION.....	13
ELECTRICAL SPECIFICATIONS AND FUSE SIZING... ..	13
STARTING THE SYSTEM.....	14
GENERAL OPERATION.....	14
MAINTENANCE AND CLEANING.....	15

INTRODUCTION

ChlorKing® inc

2935 NORTHEAST PARKWAY

***ATLANTA, GEORGIA, U.S.A,
30360. 1-800-536-8180***

*Patent # US 6821398B2
EPA Est. # 082229-GA-001
NSF-50 / UL-1081 listed*

Congratulations on purchasing your new **ChlorKing®** Saline Chlorination System, we trust that this system will offer you the ultimate in swimming environments, and give you years of trouble free operation.

This user's manual will explain in detail the operation of your new system, as well as water chemistry guides, warranty information, and much more.

If at any time you need additional information on your system, please feel free to contact us.

WARRANTY INFORMATION

The **ChlorKing®** system carries a limited 3 year warranty

1. 3 year warranty on assembly of electrical components and cell housing.
 2. 1 year on all electrical items.
 3. 2 years or 15,000 hours, which ever occurs first, pro-rated hourly, on titanium electrodes. (Year 1 is warranted fully, thereafter pro-rated warranty applies, applicable over the full 2 year period)
- **ChlorKing®** advises that titanium electrodes will have to be replaced every 15,000 hours of operating time. Under no circumstances shall the replacement titanium electrodes exceed the original 15,000 hour warranty.
 - **ChlorKing®** warranties will not be honored should it be shown that the operating and maintenance procedures have not been followed, particularly with regard to the correct maintenance of salt concentration and water chemistry.
 - **ChlorKing®** warranties of the titanium electrodes will not be honored if the system is operated in water temperatures lower than 15 degrees C.
 - **ChlorKing®** warranties of the titanium electrodes will not be honored if the system is operated in water where the salt concentration is lower than 3000 ppm.
 - During the warranty period, the customer shall return the defective component, freight prepaid, accompanied by the original invoice or proof of purchase, and **ChlorKing®** shall at it's sole discretion elect to repair or replace the defective component and return it to the customer, freight prepaid.

ChlorKing® accepts no responsibility other than to repair or replace a defective component, and this warranty specifically excludes product failure due to accidental damage, abuse, misuse, negligence, damage due to non-compliance of the operating manual or unauthorized alterations or modifications to the system. **ChlorKing®** accepts no responsibility and is not liable for any extended warranties or variations to this warranty offered by re-sellers of **ChlorKing®** systems.

SAFETY INFORMATION

PLEASE READ THE FOLLOWING SAFETY INFORMATION CAREFULLY!

WARNING!

- Only a certified technician may install and service your **ChlorKing®** system.
- Modifying your **ChlorKing®** system in anyway may cause bodily injury and will void your warranty.
- Warning: To reduce the risk of injury, do not allow children to operate this device.
- Only replace components with those specified by manufacturer.
- When installing your system, ensure that power is linked to the main pump power source for the pool to ensure that your **ChlorKing®** system never operates when the pumps are off.
- All boxes on your **ChlorKing®** system contain high voltage components. Never open any box while power is “on”.
- WARNING: Heavy pool (and/or spa) usage, and higher temperatures may require higher chlorine output to maintain proper free available chlorine residuals.
- If additional chlorine is required due to heavy bather loads, use granular or liquid chlorine to maintain appropriate chlorine residual in the water.
- Maintaining high salt and chlorine levels above recommended range can contribute to corrosion of pool (and/or spa) equipment.
- DO NOT add pool (and/or spa) chemicals directly to the skimmer. This may damage the cell.
- Check the expiry date of the test kit as results may be inaccurate if used after that date.

- When replacing the cell, only use replacement cells having a label that clearly states that it is a replacement cell for the chlorine generating device *ChlorKing Saline Chlorination System, Model NEXGEN*, REGISTRATION NUMBER _____, *PEST CONTROL PRODUCTS ACT*.
- Follow all aspects of the local and National Electrical Code(s) when installing ChlorKing model NEXGEN.
- NOTE: For outdoor pools, chlorine residuals can be protected from destruction by sunlight by addition of stabilizer (cyanuric acid).
- NOTE FOR USE ON SPAS: For proper sanitation, spas must be completely drained periodically. The number of days between COMPLETE DRAINAGE is equal to the volume of spa water in litres, divided by 10 times the maximum number of daily spa users. Refill spa with water and repeat DIRECTIONS FOR USE of the device.
- HEALTH AND HYPERTHERMIA WARNINGS FOR SPA DEVICES:
 - People with a medical condition should consult a physician before entering pool or spa water.
 - Maximum spa water usage temperature is 40 degrees C. Bathing in spa water at 40 degrees C should not exceed 15 minutes.

PREPARING YOUR WATER BEFORE INSTALLATION

ChlorKing® saline chlorination systems operate by utilizing the sodium chloride that has been added to the pool water, to produce sodium hypochlorite (liquid chlorine), through the process of electrolysis.

In order for your **ChlorKing®** system to operate correctly, sodium chloride (salt) can be added directly to the pool at least 24 hours before the installation of the equipment.

5kg of sodium chloride can be added for every 1,000 litres of pool water (ie: a 200,000-litre pool will require 1,000 kg of salt for start-up).

It is best to add the salt around the pool, and not load all salt in one section. Once the salt has been added, brush the surface of the pool continuously until the salt has all dissolved. You must never leave large amounts of salt on the surface of the pool, as this may cause damage to the pool surface.

When you add the initial load of salt, you will need to add additional chlorine, as the salt will cause a chlorine demand.

Your pool water should be balanced in the following range before turning your **ChlorKing®** system on;

Water balance parameters

	Swimming pool	Spa
Free available chlorine	1.0 – 3.0 ppm	3.0 – 5.0 ppm
pH	7.2 – 7.8	7.2 – 7.8
Total alkalinity	100 – 120 ppm	100 – 120 ppm
Calcium hardness	200 – 300 ppm	150 – 200 ppm
Cyanuric Acid (stabilizer)	30 – 100 ppm	30 – 100 ppm

Salt ranges

	Swimming pool	Spa
Salt level	4,000 – 5,000 ppm	4,000 – 5,000 ppm

NOTE: Low salt levels will cause a reduction in chlorine production and will damage the device. High salt levels will increase the possibility of corrosion on pool equipment.

NOTE: If too much salt has been added, dilute with fresh water.

Use standard test kits to check water chemistry, and use either a conductivity tester or salt test strip to check saline levels.

(Note that most conductivity testers require frequent calibration to ensure accurate readings, failure to calibrate the equipment will result in inaccurate readings.)

How to Calculate volume of a pool

For a rectangular shaped pool

Length (m) x Width (m) x Average Depth (m) x 1000 = Litres of water

For an oval shaped pool

Length (m) x Width (m) x Average Depth (m) x 0.785 x 1000 = Litres of water

For an oval shaped pool

Diameter (m) x Diameter (m) x Average Depth (m) x 0.785 x 1000 = Litres of water

2017-2433
2018-FEB-12

The following is a chart to determine the amount of salt required to raise a pool or spa to 5000 ppm

SALT CHART FOR CORRECT MAINTENANCE

ppm Salt Levels	Number of KG's of Salt to Be Added										
ppm Salt	Pool and or spa Volume (litres)										
	1,000	100,000	200,000	300,000	400,000	500,000	600,000	700,000	800,000	900,000	1,000,000
5000	CORRECT	CORRECT	CORRECT	CORRECT	CORRECT	CORRECT	CORRECT	CORRECT	CORRECT	CORRECT	CORRECT
4800	2	20	40	60	80	100	120	140	160	180	200
4400	6	60	120	180	240	300	360	420	480	540	600
4000	10	100	200	300	400	500	600	700	800	900	1000
3800	12	120	240	360	480	600	720	840	960	1080	1200
3500	15	150	300	450	600	750	900	1050	1200	1350	1500
3200	18	180	360	540	720	900	1080	1260	1440	1620	1800
3000	20	200	400	600	800	1000	1200	1400	1600	1800	2000
2700	23	230	460	690	920	1150	1380	1610	1840	2070	2300
2500	25	250	500	750	1000	1250	1500	1750	2000	2250	2500
0-(Initial Salt Addition)	50	500	1000	1500	2000	2500	3000	3500	4000	4500	5000

Note:

There may already be some salt present in the pool or spa water.
Be sure to test the salt levels prior to adding more salt to the water."

TOOLS AND PARTS REQUIRED FOR INSTALLATION

Your **ChlorKing®** system will include an installation kit comprising of the following items:

Description	Qty
Strainer clear bowl with 20 mesh	1
PVC ball valve Sch. 40	2
PVC male adaptor Sch. 40	4
PVC nipple SCH 80	2
PVC bushing Threaded	1
PVC union S EPDM w/o O-ring Sch. 80 threaded	2
Akenstrut clamps	2
Polypropylene valve, speed fit	2
Elbow street 90, SCH 80	2
Salt test strips	1

Additionally you will need the following items, not included, to complete the installation:

- Polypropylene tubing
- Flex PVC tubing
- Wall anchors
- Disconnect box, fuse box, conduit, wiring and related material to supply 220v to systems (220v systems only)

The following tools will be required to complete the installation:

Power Tools

Drill
Hammer Drill

Hand Tools

Set of sockets
Hammer
Screw Drivers – Flat & Phillips
Wire Strippers
PVC Cutters
24" (60cm) Level
Slip joint pliers
Crescent wrench

Drill Bits

Hole saw
Paddle bit
Steel bit drill set
Mason bit

Taps

2.5cm
0.9cm


Hand Tools cont..

Tape Measure
Teflon Tape
Allen Wrenches
True RMS Clamp Meter
Wire Cutters

PLUMBING YOUR SYSTEM

1. Your **ChlorKing®** system requires a minimum of 300 Lpm of flow through the venturi to produce the rated amount of chlorine.
2. If you elect to use the bypass plumbing method, you will need to purchase a butterfly valve based on the size of the pipe you are using. This can sometimes be cost prohibitive, but the upside of this plumbing method is that you are sending filtered water through the cell, which reduces the frequency of needing to clean the strainer. Bypass plumbing method also generally allows for more flow through the cell, which is recommended.
3. Remember, always ensure that the return line from the **ChlorKing®** cell is plumbed after the heater. **Never** plumb the return line before the heater, as you will be sending a high ppm of chlorine through heater, which may cause damage.

PLUMBING METHOD

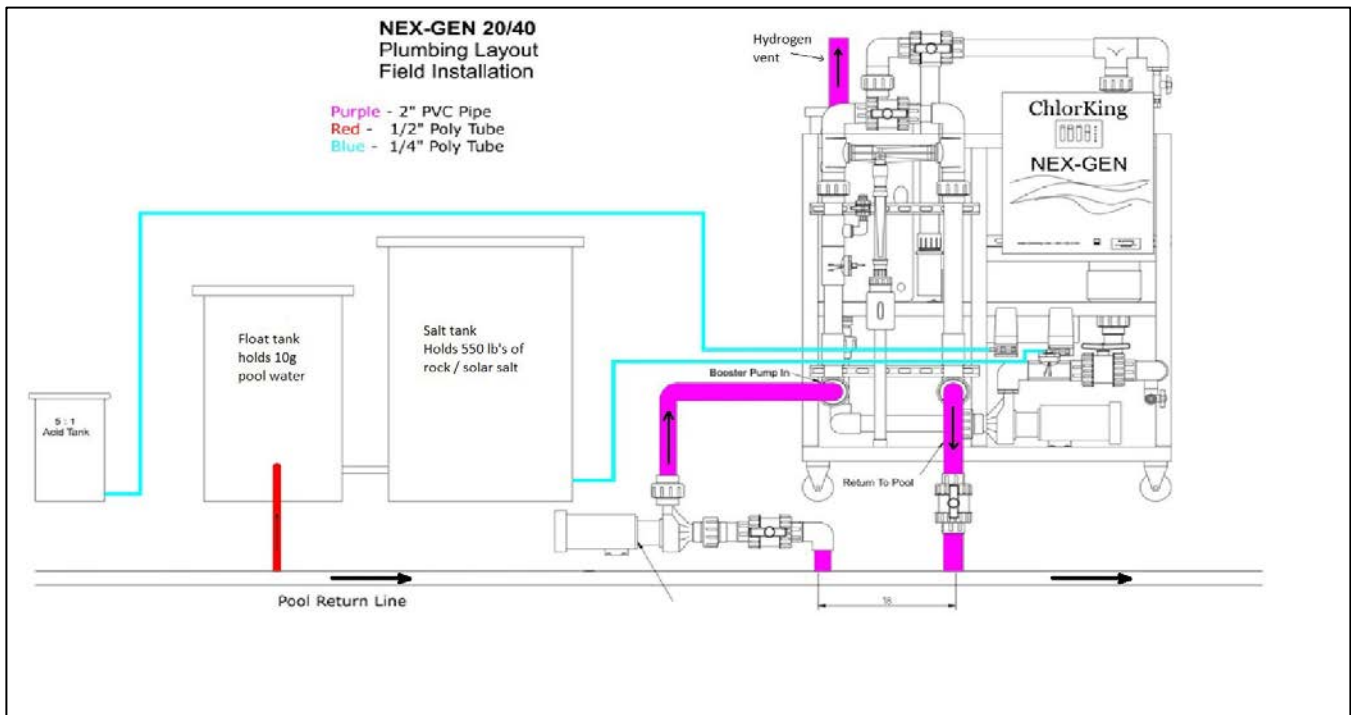

ELECTRICAL SPECIFICATIONS

Each **ChlorKing®** model has very specific wiring requirements based on its line voltage and amperage draw.

- Model NEXGEN operates at 208 – 240v requiring advanced wiring, which should only be done by a qualified electrician. 208 – 240v power needs to be run from your main breaker panel to a safety switch, then into the **ChlorKing®** main power box 1. As above, the cord labeled ORP must be plugged into a controller, or a 120v outlet.
- Your **ChlorKing®** system **must** be wired to the main pump power supply, so that if the pump is shut down, the power to your **ChlorKing®** system is lost.

ELECTRICAL SPECIFICATIONS AND FUSE SIZING

MODEL:	MAX PRIMARY AC AMPS	SYSTEM INPUT VOLTAGE	BREAKER REQUIRED
NEXGEN	23	208 – 240v	40amp

Fuse sizing:

Model	Fuse size and type
NEXGEN	40amp dual element, slow blow, RK5 fuse

STARTING THE SYSTEM

Once your **ChlorKing®** system has been successfully wired and plumbed, it is ready for use.

- Make sure that the valves to and from the system are in the open position.
- Make sure that you have water flowing through the venturi.
- Ensure that the cord labeled ORP is either plugged into a controller or directly into a 110v outlet

1. Move the safety switch to the “on” position.
2. Wait 10 seconds for the system to respond.
(If your system is linked to an automatic ORP controller, we suggest you turn the system to maximum, which will allow for full production every time the controller calls for it. If you are running your system manually you will need to find the point at which you keep a satisfactory level of chlorine in the water. It may take several days to find this point.)

- If your **ChlorKing®** system is linked to an automatic controller, remember that it will only work when the controller is in feed mode. It is also a good idea to make sure that your controller is not set in proportional band mode, instead try using double set point control (if your controller supports this function). An example of this is if you want to maintain a 700 ORP, have the controller set to turn on at 695 ORP and turn off at 705 ORP, that way your **ChlorKing®** system is not switching on and off all the time.

(Call the manufacturer of your controller if you are having difficulties in comprehending the saline chlorination system set up instructions. Most controllers also require a “gold tip” ORP probe when working with a saline chlorination system.)

GENERAL OPERATION

Your **ChlorKing®** system operates when power is activated by the main pumps, and from your ORP controller, and will continue to operate for as long as power is applied from those two sources.

- The system has an output range of 5-100% of the rated chlorine production, and can be adjusted by increasing or decreasing the flow through the venturi gauge.

7.5 litres / min = 11.34 kg per day

Normal operating amps and volts for this model device are:

➤ NEXGEN - 100amps @ 23v

- Water flow through the **ChlorKing®** cell is critical. Please ensure that you have at least 300 Lpm through the cell to achieve the rated chlorine production.

**** Remember, your ChlorKing® system is a chlorine generator, and will only operate as well as you maintain it. Careful attention must always be paid to proper chemical balancing, and regular service.**

MAINTENANCE AND CLEANING

Your ChlorKing® systems is designed to operate 24/7 at max power, and will give you years of trouble free use if you follow these basic maintenance and cleaning instructions.

- Remember, this system produces sodium hypochlorite “liquid chlorine” from the salt that you have added to the water. It will only continue to operate correctly if salt is maintained at the correct 5000ppm level. Low salt will lower the amount of chlorine produced, and cause damage to the electrolytic cell. **(Warranty’s will not be honored if it is determined that salt has been run low.)**
- There is a strainer mounted at the bottom of your ChlorKing® cell, which will trap debris and stop it from entering the cell, this strainer needs to be cleaned regularly.
- The plates that are inside the PVC cell housing are the most critical part of the system. You will notice that over time a white substance (calcium minerals) will build up on the plates, especially at the top of the cell. This buildup needs to be cleaned by removing the cell from the housing and soaking it in a dilute muriatic solution (1:5) for about 10 – 15 minutes. Reverse polarity systems will need to be cleaned every 3 – 6 months. **(Warranty’s will not be honored if it is determined that the cell has not been cleaned regularly.)**
- **Remember, the titanium plates that make up the cell are the most expensive part of the ChlorKing® system and are going to need to be replaced roughly every 15,000 hours of operating time. By ensuring that salt is always at the correct level, and plates are cleaned regularly, you will increase their “life”, thus saving you money...**